



PRESTO | **GEOSYSTEMS**

GEOPAVE® U-Clip Driver Instructions

Note: For use ONLY with the Presto Geosystems GEOPAVE® U-Clip installation process.

STEP 1: Insert the U-Clip Device in the GEOPAVE Driver




Insert one U-Clip into the bottom of the GEOPAVE Driver assembly head (U-Clip closed end first).



Set U-Clip 1/2 inch to 3/4 inch recessed inside the GEOPAVE Driver head.

Step 2: Engage the U-Clip with Adjacent GEOPAVE Units

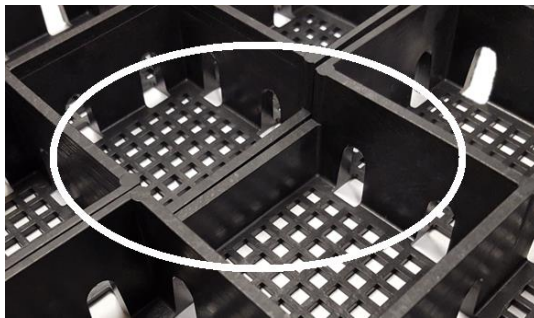

Position GEOPAVE Units in specified laying pattern (bricklayer, herringbone, or offset) over the prepared base.

Place the head of the pre-loaded GEOPAVE Driver over two adjacent GEOPAVE units at the half wall location. Ensure no aggregate particles are trapped between the adjacent units prior to connecting.



Fully engaged GEOPAVE Driver and U-Clip over two adjoining GEOPAVE cell half walls.

Step 3: Drive the U-Clip to Connect Adjacent GEOPAVE Units

Place hands on the handle grips and firmly pump the driver 2-4 times (or as needed) to drive the U-Clip completely down so that the adjacent sections of the units are flush and U-Clip is securely seated.



If the U-Clip is not driven down completely, place the driver head over the U-Clip and repeat Step 3.