


Build a Wall

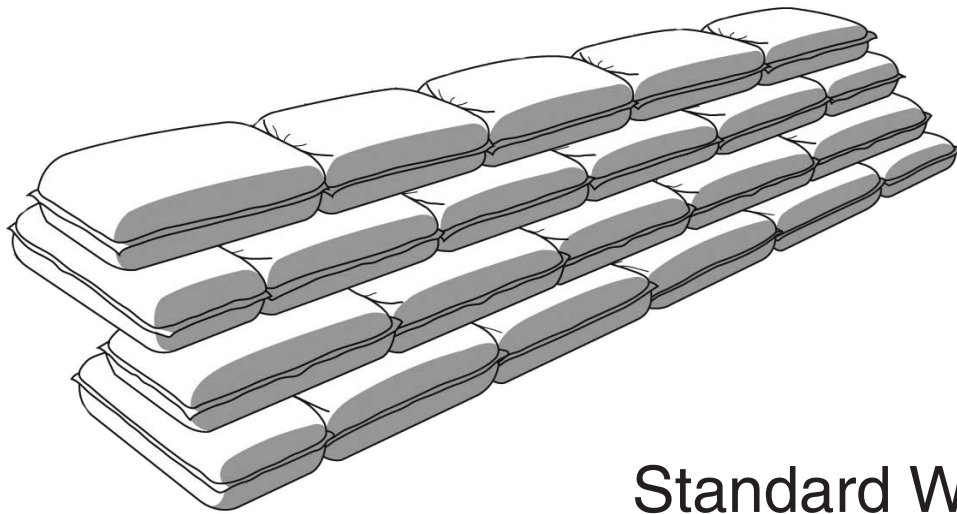


Standard Wall



(Patent Pending)

©2007 Agrecol Corporation


Standard Wall

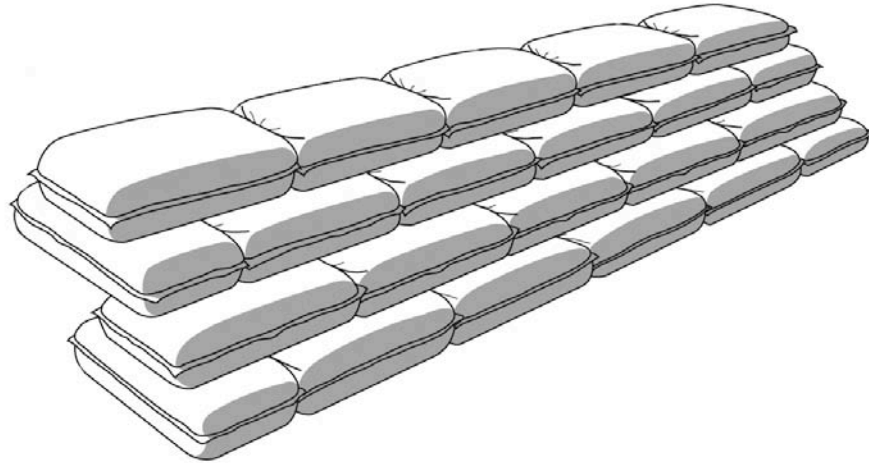

Site Preparation

**Excavate a level foundation
trough 16" wide and 3" deep.**


Excavated material (spoils) may be
used to backfill during construction.

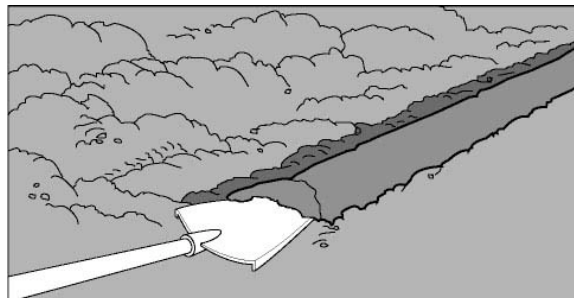


Site Preparation

Tamp

Compact bottom of foundation trough using hand tamper or equivalent.

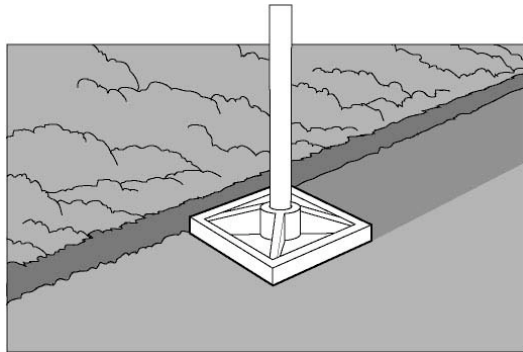


Foundation Course

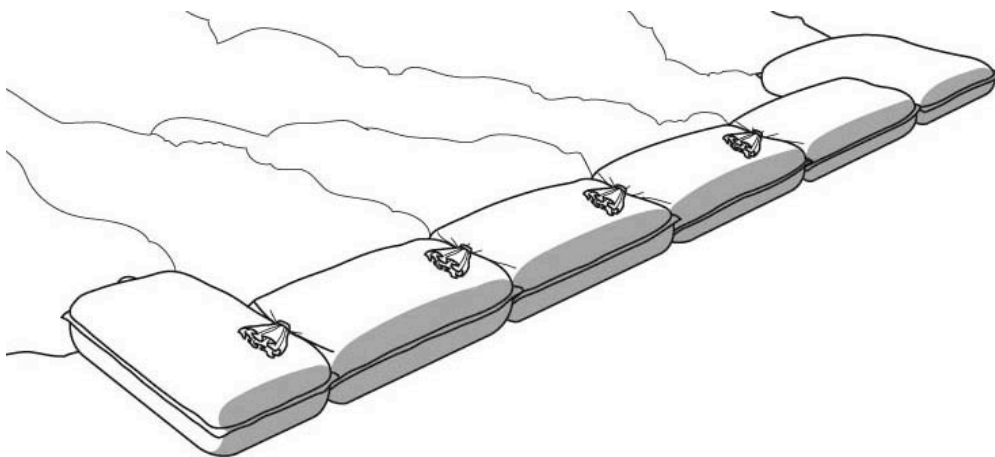


- a. Place filled bags next to each other, seam-side out, horizontally, full length of the wall.

Foundation Course

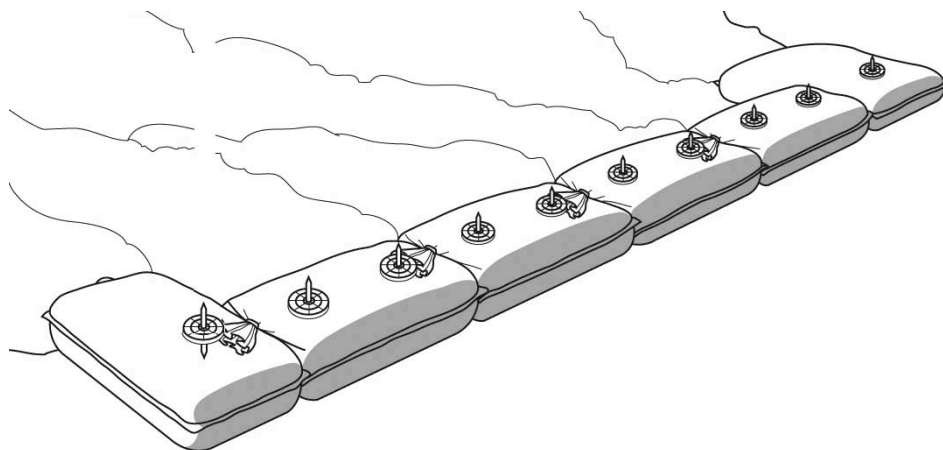


- b. Using the spike installation tool, or hand install, insert two spikes in the top of each bag.

Standard Course

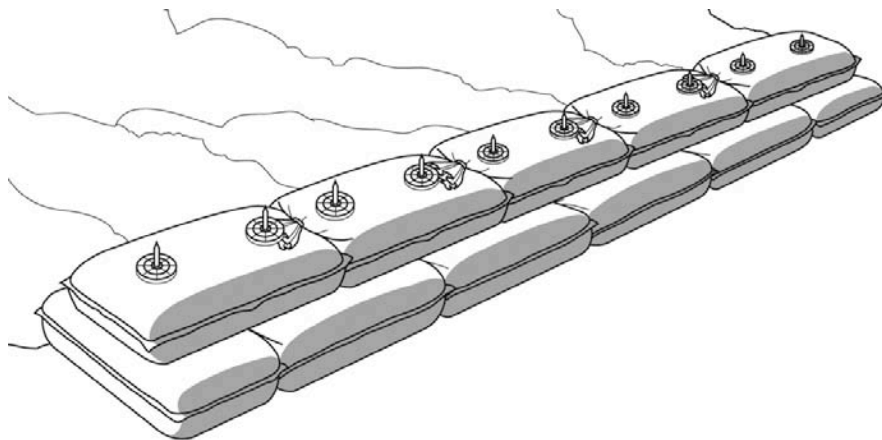


- a. Place bags horizontally on top of the first course of bags.
- b. As you place each bag, or after you have laid one entire course of bags, using the tamping tool, tamp each bag to flatten it slightly to insure a solid and uniform structure.
- c. Using the spike installation tool, or hand installation, insert two spikes in the top of each bag.

Standard Course

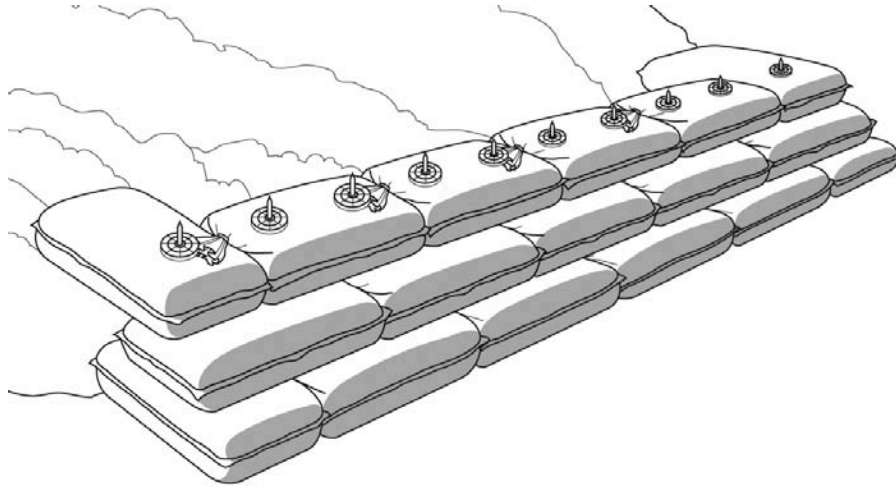

Build subsequent standard courses, until you reach desired height of the decorative wall.

Top Course

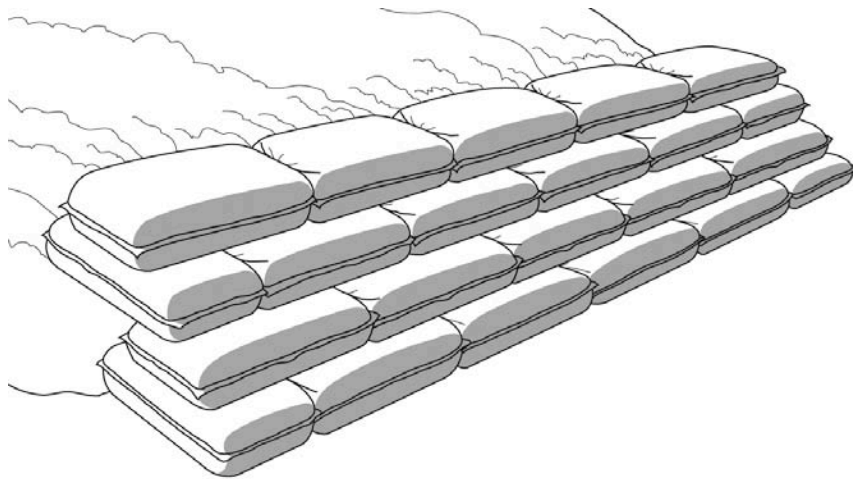

When you place bags for the final course (top of wall), do not put spikes into the top of the wall.